


THE COBBLE MOUNTAIN SUMMIT CHAIR

HANGING INSTRUCTIONS

PLEASE READ AND FOLLOW THESE INSTALLATION INSTRUCTIONS. DO NOT EXCEED THE MAXIMUM LOAD LIMIT OF 350 LB. DO NOT LET SMALL CHILDREN PLAY IN THE CHAIR UNATTENDED. AFTER INSTALLATION, PERIODICALLY VERIFY THAT THE SCREW HOOK IS SECURE.

LOCATION: The Summit Chair will require an area of approximately 4' x 5' as well as a sturdy anchor point overhead. Nothing less than 2" x 6" framing lumber should be used. Use a stud finder to locate the center of the stud if screwing the hook into a finished ceiling.

INSTALL THE HOOK: Using an electric drill with a 5/16" drill bit **VERY CAREFULLY** locate the center of the overhead beam. Drill a hole straight-up (plumb) about 2" deep. Install the hook; be sure to bury all the threads. **DO NOT INSTALL THE HOOK HORIZONTALLY!**

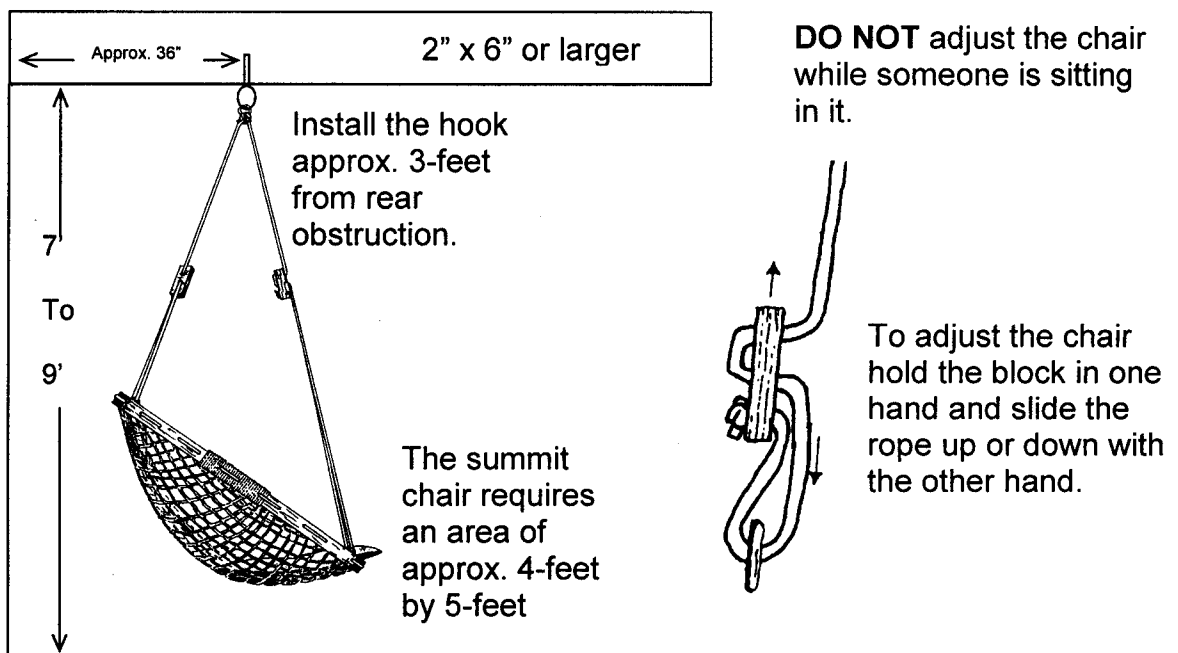

HANG & ADJUST THE CHAIR: Hang the chair on the hook. To adjust the height and angle of recline, simply slide the wooden blocks along the harness ropes. Toss the cushion in and have a seat. Make further adjustments as necessary.

CARE & MAINTENANCE: Spot clean the pillows. Clean the ropes using warm, soapy water and a soft bristled scrub brush. Rinse thoroughly and allow to dry completely, preferably in direct sunlight. To spruce up the wood frame, carefully apply furniture oil using a soft, clean cloth. **DO NOT** store your chair where mice or bugs may be present.

COBBLE MOUNTAIN, INC.
PO Box 237 – 1051 Village Rd.
East Corinth, VT 05040 USA
800-322-5232 or 802-439-5232
Email: info@cobblemountain.com Fax: 802-439-523